



# LINESET BOX™

## INSTALLATION GUIDE

Line Set Rough-In Box — Step-by-Step Installation

Page 1 of 2

jtproducts.com

845.988.2000

sales@jtproducts.com

J.T. PRODUCTS LLC

### BEFORE YOU BEGIN

Rough opening: 5¾" × 10¾" · Hardware: 8 × ¾" galvanized deck screws (or equal) · Tools: drill, hole-saw, silicone, PVC cutter · Install during rough-in before drywall.

### PART 1 — ROUGH-IN & MOUNTING

#### 1 CUT ROUGH OPENING

Cut a 5¾" × 10¾" rough opening in the wall sheathing.



#### 2 MOUNT THE BOX

Install the Lineset Box™ and secure with 8 — ¾" long galvanized deck screws (or equal).



3 Cut a hole with a hole-saw in the top of the box to the size of the line set. (For a 7/8 x 3/8 line set use a 1 7/8" hole-saw.)

#### 4 RUN THE LINE SET

Run the line set into the box to the bottom or thru it if you like to leave it long.



5 Run the low voltage wire into the box following the line set.

6 Cut a 2nd hole in the top of the Lineset Box™ to run the condensation drain. (For a ¾" schedule 40 PVC use a 1" hole-saw.)

CONTINUED ON PAGE 2 — CONDENSATION DRAIN

### PART 2 – CONDENSATION DRAIN

#### 7 CUT STUB & GLUE COUPLING

Cut a 7 inch long PVC stub and glue it on a coupling.



#### 8 INSERT THE DRAIN STUB

Insert the 7 inch long stub into the hole you just made for the condensation drain.




#### 9 SEAT THE COUPLING

Push the stub down until the coupling is tight to the top.




#### 10 DRAIN IS LOCKED IN

This will ensure that the condensation drain is sturdy, square and plumb in the box and will not be affected by other contractors or moved around from the inside.

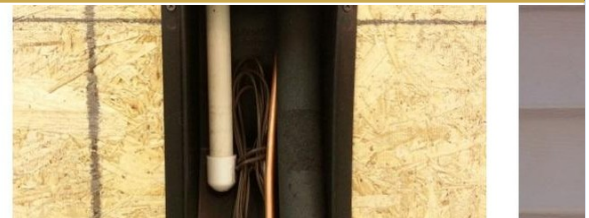

#### 11 FINISHED LOOK

Professional termination point. Inspect from outside before closing the wall.

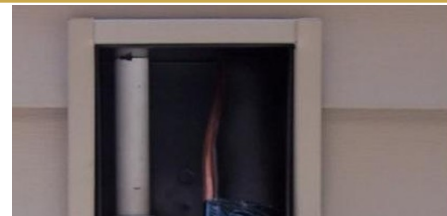

12 Seal all holes from the inside with silicone caulk. This guards against air infiltration, moisture, and pests. Installation is complete.

#### PRO TIP – PROTECT YOUR BOTTOM LINE

How many times have you scoped out where to run your line set, gone to lunch, and come back to find the plumber or electrician took the bay? Install the Lineset Box™ the moment you cut the house – just one kink in a copper line set and it's done, with hours of unbillable time and open flames in a finished wall. The Lineset Box™ is insurance for your line set and your bottom line. Install it early. Own that bay.